



BALLISTIC DOOR PANELS

(LEVEL IIIA)



INSTALLATION GUIDE

As shown on

FORD® F-150 Special Service Vehicle — SuperCab

(2015 - 2016)



ALSO COMPATIBLE WITH:

- **Ford® F-150 Special Service Vehicle — Regular Cab**
(2015 - 2016)
- **Ford® F-150 Special Service Vehicle — SuperCrew®**
(2015 - 2016)



angelarmor.com

970 235 2961

sales@angelarmor.com

TABLE OF CONTENTS



INTRODUCTION	3
Product Description	3
Installation Overview	3
Warnings & Cautions	4
Legal Statements	4
TOOLS & PARTS LIST	5
Recommended Tools	5
Installation Kit Contents	5
INSTALLATION	6
Overview	6
- General Installation Procedure	6
- Important Notes	6
Procedure	7
- Preparing for Installation	7
- Removing the Outer Window Weatherstrip	7
- Inserting the Ballistic Door Panel	8-9
- Replacing the Outer Window Weatherstrip and Completing Installation	10
REMOVAL OR DECOMMISSION	11

© 2016 ANGEL ARMOR, LLC. ALL RIGHTS RESERVED. PRINTED IN THE U.S.A.

FORD® IS A REGISTERED TRADEMARK OF FORD MOTOR COMPANY.

INTRODUCTION

Congratulations on your purchase of the Angel Armor™ Ballistic Door Panel (Level IIIA) for the Ford® F-150 Special Service Vehicle (SSV) for 2015 - 2016 models! It's our honor to provide advanced protection to those who put their lives on the line in the name of law and order.


In just a matter of minutes, your vehicle will be outfitted with the finest ballistic technology available. With innovative ballistic materials, advanced designs and the fastest installation in the industry, Angel Armor Ballistic Door Panels elevate protective technology to a higher level.

Product Description

Angel Armor Ballistic Door Panels (Level IIIA) are constructed of a proprietary technology that is not only remarkably strong, but also thin, lightweight and weatherproof. These properties, plus semi-rigid material characteristics, enable unprecedented ease of installation while providing protection independently tested in accordance with NIJ Standard 0108.01 protocol. Angel Armor Ballistic Door Panels (Level IIIA) for the Ford F-150 SSV exceed NIJ Standard 0108.01 protocol for multi-round protection and offer a five-year express limited warranty. Within this period, the panels may be removed and transferred to another vehicle of the same make and model without violating the warranty.

The Ballistic Door Panel installation shown in this Installation Guide was performed on a Ford F-150 SSV SuperCab model.

The installation process is the same for the Ford F-150 SSV Regular Cab and F-150 SSV SuperCrew® models. The physical shape of the ballistic panel is the only thing that changes between models. See Figure 1A and 1B below for reference.

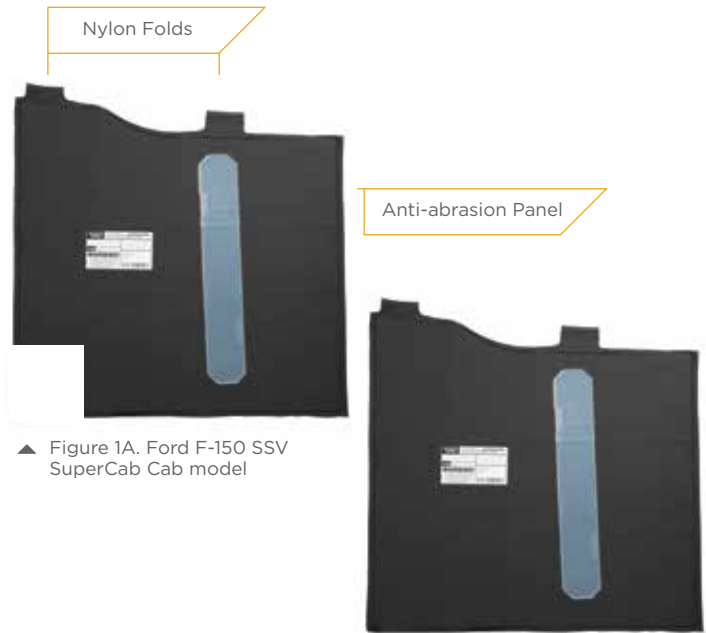

▲ Figure 1A. Ford F-150 SSV SuperCab Cab model

▲ Figure 1B. Ford F-150 SSV Regular Cab and F-150 SSV SuperCrew models

Installation Overview

Angel Armor Ballistic Door Panels (Level IIIA) for the Ford F-150 SSV require no additional brackets or fasteners and eliminate the need to remove the interior door panel or window glass. The Ballistic Door Panel is inserted into the door, adjacent to the window glass. A Torx T15 screwdriver, an 11 mm socket and door pry tools are the only tools required.

Installation into vehicles takes as little as 90 seconds for experienced installers. The average user installation takes only five to 10 minutes.







Watch an installation in action at angelarmor.com




Warnings and Cautions

Please adhere to the following guidelines to prevent personal injury, equipment damage and unnecessary difficulty during installation.



DISCONNECT THE VEHICLE BATTERY AFTER THE WINDOW IS ADJUSTED FOR INSTALLATION TO AVOID ACCIDENTAL AIRBAG DEPLOYMENT. ACCIDENTAL DEPLOYMENT OF THE AIRBAG MAY CAUSE SERIOUS PERSONAL INJURY.

-  Read this guide in its entirety before beginning installation.
-  Wear appropriate protective gear, including eye and foot protection.
-  Avoid excessive force when inserting the Ballistic Door Panel into the car door. Excessive force may damage the Ballistic Door Panel or internal door components.
-  When weatherstrip is disassembled, do not drop screws or other assembly components inside the door, as they may be difficult to retrieve. If possible, use magnetic tools during installation.

-  Use only plastic trim removal/prying tools on finished surfaces to help prevent scratching.
-  Discard and replace any door components that are inadvertently damaged during the installation process. Proper installation according to the instructions in this guide should not cause damage to any vehicle or Ballistic Door Panel parts or components.
-  Use caution when removing parts that may have sharp edges, such as the outer window weatherstrip.

Legal Statements

See supplied Warranty and Terms and Conditions for important legal information. These instructions are provided for your convenience only, and Angel Armor expressly disclaims any liability for any damage to personal property or personal injury that occurs as a result of either installation or removal of panels.

TOOLS & PARTS LIST

This section lists the tools recommended for installation and the parts included in the installation kit.

Recommended Tools

This section lists tools to be supplied by the installer.

- Torx T15 screwdriver
- 11 mm socket
- Plastic door pry tools



▲ Figure 2. Torx T15 screwdriver

Installation Kit Contents

This section lists the Ballistic Door Panel type and all parts included with it.

- Angel Armor Ballistic Door Panel (Level IIIA) for Ford F-150 SSV (2015 - 2016)



▲ Figure 3A. Ford F-150 SSV SuperCab model



▲ Figure 3B. Ford F-150 SSV Regular Cab and F-150 SSV SuperCrew models

- Angel Armor brand label



▲ Figure 4. Angel Armor brand label

- Isopropyl alcohol wipe



▲ Figure 5. Isopropyl alcohol wipe

INSTALLATION

This section provides instructions for installing Angel Armor Ballistic Door Panels (Level IIIA) into the Ford F-150 SSV.

Overview

Installation of Angel Armor Ballistic Door Panels (Level IIIA) into the Ford F-150 SSV is accomplished in three easy steps. See *Procedure* on page 7 for detailed instructions.

General Installation Procedure

- 1 Remove outer window weatherstrip.
- 2 Insert and secure Ballistic Door Panel.
- 3 Replace outer window weatherstrip.

Important Notes

- The directions, photographs and illustrations in this guide depict an installation performed on the driver's side. The same installation procedure applies to the passenger door.

NOTE: The anti-abrasion panel faces the interior of the vehicle for both the driver-side and passenger-side ballistic panels.
- The Ballistic Door Panel installation shown in this Installation Guide was performed on a Ford F-150 SSV SuperCab model. The installation process is the same for the Ford F-150 SSV Regular Cab and F-150 SSV SuperCrew models. The physical shape of the Ballistic Door Panel is the one and only thing that changes between models. See Figure 1A and 1B for reference.
- Note the location of screws, fasteners, wires and door components before disassembling to aid proper re-assembly after Ballistic Door Panel installation.
- Place all removed hardware and components in a safe place during installation.
- Angel Armor Ballistic Door Panels are semi-rigid, which allows them to be bent slightly for easy installation. To help prevent damage to the Ballistic Door Panels, do not bend them tighter than a 6" radius (12" diameter).
- Firm pressure may be needed to clear minor obstructions during insertion of the Ballistic Door Panels, but never use excessive force. Excessive force may damage internal door components.

PROCEDURE

Complete the following steps to properly install Angel Armor Ballistic Door Panels (Level IIIA) for Ford F-150 SSV.

Preparing for Installation

- 1 Lower the window glass completely.
- 2 Turn off the vehicle ignition switch, and remove the key.
- 3 **⚠️ Disconnect the vehicle battery to avoid accidental airbag deployment.**

Removing the Outer Window Weatherstrip

- ⚠️** Use caution when removing parts that may have sharp edges, such as the outer window weatherstrip.

- 1 Remove the outer window weatherstrip Torx screw at the rear end of the window frame.



▲ Figure 6. Removing outer window weatherstrip screw

- 2 Use the door pry tools to release the inner hooks on the outer window weatherstrip.



▲ Figure 7. Releasing the inner hooks

- 3 Carefully pull up on the back end of the outer window weatherstrip to remove it from the window frame. Work forward along the window frame, pulling up on the trim to remove it completely.



▲ Figure 8. Removing the outer window weatherstrip

Inserting the Ballistic Door Panel

- 1 Bend the bottom of the Ballistic Door Panel away from you, pressing with your knee or hand. This creates a slight curve in the ballistic panel that matches the shape of the bottom of the Ford F-150 SSV door and eases installation.

⚠ Do not bend the Ballistic Door Panel tighter than a 6" radius (12" diameter).



▲ Figure 9. Bending the Ballistic Door Panel to create a slight curve

- 2 Hold the Ballistic Door Panel so that its anti-abrasion panel faces the interior of the vehicle.
- 3 Leading with the bottom edge of the Ballistic Door Panel, begin to insert the panel into the door adjacent to the outer surface of the window glass.



▲ Figure 10. Holding Ballistic Door Panel against window glass while leaning back

NOTE: Hold the Ballistic Door Panel against the window glass as you insert to avoid obstructions inside the door. This can be achieved by lightly leaning back/pulling the panel out toward the exterior of the door.

- 4 Slide the Ballistic Door Panel down into the door, following the edge of the window frame.
- 5 Grip the nylon fold at the top of the Ballistic Door Panel when it is inserted the majority of the way into the door.
- 6 Slide the Ballistic Door Panel forward, toward the front of the vehicle. The leading edge of the anti-abrasion panel will likely catch on the vehicle window track. Push the front, top edge of the Ballistic Door Panel toward the vehicle exterior, while sliding it forward, to move the panel past the window track.



▲ Figure 11. Gripping and sliding the Ballistic Door Panel forward into place

NOTE: Work the Ballistic Door Panel forward firmly to clear any obstructions, but never use excessive force. Excessive force may damage internal door components or puncture the Ballistic Door Panel's weatherproof cover. It may be useful to shimmy the panel side to side while pushing forward to move it into position.

Inserting the Ballistic Door Panel

CONTINUED

7 Push the Ballistic Door Panel down into its final location until the nylon fold at the top of the panel folds over the horizontal metal edge of the window frame. This is the same edge that the outer window weatherstrip sits on when installed.

8 Verify that the Ballistic Door Panel is properly positioned by confirming the following:

- The Ballistic Door Panel is seated all the way forward.
- The nylon edge of the Ballistic Door Panel is lined up with the curve of the horizontal metal edge of the window frame.
- The Ballistic Door Panel is all the way down, and the nylon fold sits flush where the weatherstrip is installed.
- Ensure the gaps in the nylon fold allows for exposure to all weatherstrip snaps. See Figure 12.

NOTE: If excessive nylon is exposed above the door and the crease does not align with the top edge of the window frame, repeat steps 1 through 8 of this section. Avoid tearing the Ballistic Door Panel's weatherproof cover on the 'teeth' inside of door by pushing the panel toward the interior of the vehicle before lifting it out of the door.



▲ Figure 12. Proper alignment of nylon fold with window frame

Replacing the Outer Window Weatherstrip and Completing Installation

- 1** Press the front edge of the outer window weatherstrip on the metal edge of the window frame, and carefully slide the weatherstrip under the gap in the side-view mirror to engage the existing trim.



▲ Figure 13. Reinstalling outer window weatherstrip

- 2** Verify that no nylon is exposed below or around the outer window weatherstrip.
- 3** Working from front to back, press down to seat the entire length of the outer window weatherstrip onto the metal edge of the window frame.
- 4** Replace the rear outer window weatherstrip Torx screw.



▲ Figure 14. Replacing outer window weatherstrip screw

- 5** Verify that all trim and window components are properly re-installed.
- 6** Re-connect the vehicle battery.
- 7** Attach the Angel Armor brand label to the interior door panel by completing the following procedure:
 - A** Clean the attachment area on the door with the supplied isopropyl alcohol wipe.
 - B** Allow the door surface to dry completely.
 - C** Remove the backing from the brand label.
 - D** Apply the brand label to the door, pressing for at least 30 seconds to ensure proper adhesion.





▲ Figure 15. Applying Angel Armor brand label

INSTALLATION COMPLETE:

Your vehicle is now equipped with advanced ballistic protection from Angel Armor.

REMOVAL OR DECOMMISSION

This section describes the process for removing the Ballistic Door Panel for decommission or transfer to another vehicle.

- 1** Lower the window glass completely.
- 2**  **Disconnect the vehicle battery to avoid accidental airbag deployment.**
- 3** Follow the procedure described in *Removing the Outer Window Weatherstrip* on page 7.
- 4** Grip the nylon folds at the top edge of the Ballistic Door Panel.
- 5** Slide the Ballistic Door Panel toward the back of the vehicle, and then up to remove it from the door. Be sure to align the Ballistic Door Panel with the vertical window frame for easier removal.
 -  Avoid tearing the Ballistic Door Panel's weatherproof cover on the 'teeth' inside of door by pushing the Ballistic Door Panel toward the interior of the vehicle before lifting it out of the door.
- 6** Follow the procedure described in *Replacing the Outer Window Weatherstrip* on page 10.
- 7** If removing the panel for transfer to another vehicle, inspect panel after removal. Contact Angel Armor with any concerns about wear or damage.